

# DZ47G isolation switch Instruction manual



Please read the instructions carefully before installing and using the product And keep properly, reserve

## Safety notification

Before installation, operation, operation, maintenance, and inspection, please read this manual carefully, and install and use this product accurately according to the content in the manual.

# ⚠ Danger:

- It is strictly forbidden to operate the isolation switch with wet hands; In use, do not touch the conductive part;
- Maintenance and maintenance, must ensure that the product is not live;
- It is strictly prohibited to test the product by short circuit;

## ⚠ Notice

- Installation, maintenance and maintenance should be operated by professionally qualified personnel;
- The characteristics of the product have been set before the factory, and can not be disassembled or assembled by itself in useMeaning regulation;
- The product can not be used alone, in use must be used with the same rated current fuse or circuit breaker;
- Please confirm the rated voltage, rated current, frequency and characteristics of the product before use Meet job requirements;
- •In order to prevent short circuit between phases, the exposed wire or copper bus should be insulated Deal with:
- If the product is damaged or abnormal sound when unpacking, stop using immediately and contact the supplier;
- When the product is scrapped, please do a good job of product waste treatment, thank you for your cooperation.

# Understand the DZ47G isolation switch



#### Instructions:

- 1 Power end 2 Company trademark: 3Product model4 rated current: a, 20 a, 32 a, 40 a, 63 a, 80 a, 100 a, 125 a 5 protection level and frequency of use category 6 Frequency 7 Rated voltage: 230V-(1P)/400V ~ 8 meets the standard 9. Close and disconnect indicator 10 Load end
- 11 Certification mark 12 Wiring diagram

# Normal conditions of use, installation and transport

- (1) The upper limit of ambient air temperature does not exceed +60 ° C, the lower limit is not less than -20 ° C, and the average temperature within 24 hours does not exceed +35 ° C:

  (1) The upper limit of ambient air temperature does not exceed +35 ° C:
  - (2) The elevation of the installation site does not exceed 2000m;
- (3) When the temperature is +40, the relative humidity of the air does not exceed 50%: At a lower level

The temperature allows a large relative humidity, for example, at +20°C, the relative humidity is 90%, and takes into account the condensation on the product due to temperature changes;

- (4) Installed in a medium without explosion rsk, and there is no gas and dust sufficient to corrode metal and destroy insulation in the medium:
- (5) Installed in a place without significant mpact vibration and without rain and snow attack:
  - (6) Pollution level: Level 2;
  - (7) Installation category: Class I, Class I;
  - (8) Should be nstalled in the distribution box, distribution cabinet or box;
  - (9) Use category: AC-22A.
  - (10) The product allows reverse wiring.
- Norma storage and transportation conditions
  - (1) The lower limit of temperature is not less than 40°C, and the upper limit is not more than +70°C:
- (2) The relative humidity (25°C) does not exceed 95%; (3) The product should be handled ightly during transportation should not be put upside down, and should try to avoid violent collisions.

#### Technical characteristics

### Categories

According to the number of poles; unipolar, two, three, four

#### poles.

Main technical parameters are shown in Table 1.

Shel and frame grade Maximum rated current	Rated current le		Rated Votatge v	Rated shot-time withstand current IO	Rated i	Rated impuse withstand voltage Uimp
7.5	20 25	11		-		
125	40 63 801	2, 3	4	15le ls	500V	6kV

## Outline and mounting dimensions

The isolation switch is mounted on a guide rail, and its outline and installation dimensions are shown in Figure 1. Unit:mm

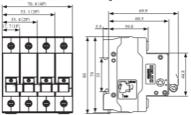


Figure 1 Outline and mounting dimensions

Installation, use and maintenance

- Before installation of isolation switch:
- (1) Use with circuit breakers or fuses:
- (2) Check whether the technical parameters on the pad printing mark meet the requirements of use;
- (3) The isolation switch is closed and divided into several times to check whether the operating mechanism is stuck and whether the mechanism is reliable.
- Isolation switch installation should:
- The cross-sectional area of the connection wire should be adapted to the rated current of the isolation switch,

See Table 2 for details:

Table 2 Rated current and cross-sectional area of connecting wires

Cable tightening torque N.m	Both the power and load ends are 2.0					Both the power and load ends are 3.5		
Minimum length of connecting wire m	1	1	1	1	1	1	1	2
Conductor cross- sectional area mm2	2.5	4	6	10	16	25	35	50
Rated current A	20	25	32	40	63	80	100	125

(2) This series of isolation switch adopts TH35-7.5 steel mounting quide rail.

Maintenance and maintenance:

- (1) Maintenance and maintenance must be operated by
  - professionally qualified personnel;
    (2) Must ensure that the product is not charged:
- (3) Maintain and maintain once a year under normal operating conditions, and the maintenance contents are shown in Table 3.

Table 3 Maintenance and maintenance

Item	Content				
Appearance	No dust, no condensation, if necessary to clean No damage The shell and connecting terminals do not change color				
Terminal connection	Tighten according to torque in Table				
Handle closing/opening operation	Operation should be flexible				

## Unpacking inspection

After opening the box, the user must check whether the product is intact, whether the exposed metal parts are rusty, whether the product is defective due to poor transportation and storage, if the above phenomenon, the product can not be used, please contact the supplier in time to solve.

# Corporate commitment

Under the premise that the user complies with the use and storage conditions and the product seal is intact, the company is responsible for free repair or replacement if the product is damaged or cannot be used normally due to manufacturing quality problems within thirty-six months from the date of production. If the warranty period is exceeded, repair shall be paid. However, if the damage is caused by the following circumstances, paid repair will be made even within the warranty period:

- (1)Improper use, maintenance or storage;
- Self-modification or improper maintenance;
   Damaged due to fall and installation after purchase:
- (4) Earthquake, fire, lightning strike, abnormal voltage and secondary disasters and other force maieure.

If you have any questions, please contact the distributor or our customer service department. Customer service hotline: 400-826-8008

Order instructions

Users need to specify when ordering:

- a) Name, model and specification of the isolation switch:
- b) Rated current and number of poles of the isolation switch;
- c) Quantity.

Example: Set DZ47G three-pole isolation switch, rated current 32A, quantity 1000 Sets

It should be written as: DZ47G/3P,32A,1000 sets.

Disconnecting switch

**DELIXI** 

Certificate of conformity

Name: \_Disconnecting switch

Model DZ47G

This product is allowed to leave factory after passing inspection.

Executive standard GB/T14048.3

DELIXI ELECTRIC LTD

#### DELIXI ELECTRIC LTD

Lixi High-tech Industrial Park, Liushi Town, Yueqing City, Zhejiang Province, China Zip Code: 325604 TEL: (86-577) 61778888 FAX: (86-577) 61778000

Customer service hotline: 400-826-8008

www.delixi-electric.comThis manual is from the first

edition in July 2019